

The MK VII

D
O
R
M
O
B
I
L
E
T
E
N
T

PRICE

£34. 10. 0. Retail

NO PURCHASE TAX

Martin
Walter Ltd



METHOD OF ERECTION

- A**
1. Lay tent out flat (at this stage do not peg out corners of groundsheet through the inside eyelets).
 2. Slip ridge poles through pole pockets outside tent at points A and B, join sections at centre, extended full length by means of cliquets. (When the canvas is wet the cliquets adjustments may not be necessitated.)
 3. Fit through external sleeve the diagonal and upright poles into ends of ridges and insert pegs in foot pieces, tighten the 4 roof corner webs each fitted 2 rings.
 4. Take guylines from point B, loop round upright poles and pull tent upright and peg out lines.
 5. Insert pegs to corners of groundsheet, 2 inside front, 2 outside at rear.
 6. Erect awning poles, slip spindles through eyelets at point D and peg out guylines.
 7. Peg out lines A - looping round diagonal pole - and peg all round including rubber rings and foot of mudwall on awning walls.
 8. Adjust all guy tensions to obtain satisfactory "set".


The foregoing erection instructions are applicable when the tent is to be used as a "free-standing" tent. If the tent is to be used in conjunction with a Dormobile Caravan continue as follows:-

- B**
9. Remove poles from point D, allowing awning to drop. (It may also be necessary to remove the pegs from the skirting to allow sufficient free movement of the canvas.)
 10. Back Dormobile up to tent.
 11. Feed plastic cord, fitted at the end of the awning, through the channel fixed to the roof of Dormobile.
 12. Place awning poles at point C using eyelets provided.
 13. Stretch draughtshield round rear of Dormobile and peg out guylines.

To revert to free-standing, after attachment to vehicle, simply reverse the procedure in paragraphs B 9-13 inclusive.

GENERAL AIDS

- The Dormobile tent is best pitched on a fairly level piece of ground.
- When packing your tent, coil up all guylines, this will prevent tangling.
- Clean all pegs to avoid soiling.
- Do not pack pegs inside tent canvas.
- Should you have to pack your tent wet, unpack as soon as possible and thoroughly dry.

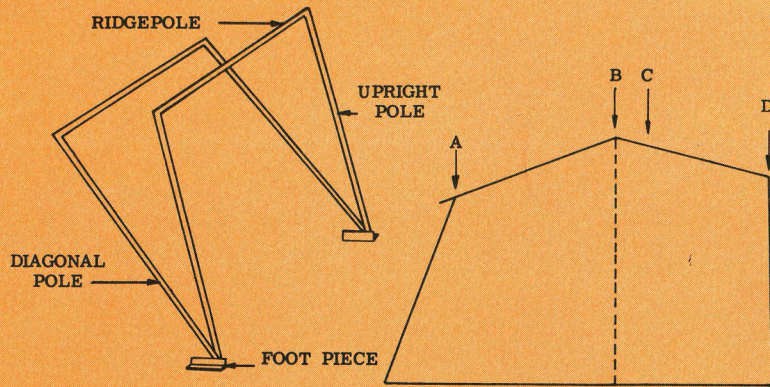

PRICE £34. 10. 0. retail

A 4' 2" length of aluminium channel is provided with each tent for fixing to the roof of your Dormobile. The dealer who supplied you with this tent will advise you how to fit.

If the tent is supplied at the same time as a vehicle, the aluminium poulard channel is fitted for you.

THE AUTOMOBILE ASSOCIATION

RECEIVED

13 DEC 1965

TECHNICAL LIBRARY

GENERAL DESCRIPTION

This entirely new tent has been designed primarily for use with the DORMOBILE Caravan. It may stand on its own, or be attached to the rear or side of the vehicle.

The tent is strongly made from an orange, continental, proofed material. It has a stout sewn-in P.V.C. coated waterproof groundsheet for comfort and convenience. Draught and insect proof.

Latest tubular alloy exterior frame design is used, and guy ropes are provided.

Rubber loops at the eaves of the tent provide the tension normally needed to maintain the proper shape and rigidity. A slide fastener and press studs close the door way of the tent.

Built-in curtains to canopy give extra enclosed space between Dormobile and tent for dining/lounge use. Or, with extra groundsheet, can be utilised as additional sleeping quarters. Canvas draught-flap to fill space between bottom of vehicle and ground is provided.

DIMENSIONS

Main Tent: Interior height, Front	7' 0"
" " Rear	5' 0"
" length	6' 10"
" width	8' 0"
Canopy: Length	5' 6"
Tent with Canopy and Side Walls	
Interior Floor Length	12' 4"
" " Width	8' 0"

Valises packed with above:

- (1) All Canvas, Guys and Pegs
32" long 10" dia., Weight 30 lbs.
- (2) Frame: 46" long, 6" dia.,
Weight 9 lbs.

STOWING THE TENT:

The entire tent, poles, canopy extension, guy ropes and pegs stow away into two valises weighing 39 lbs. It stows neatly on the rear portion of the luggage rack of the DORMOBILE.

Extra Groundsheet for Lounge

Size: 78" x 52"

£ 2. 2. 0.

May be ordered from:

Marlin
Walter Ltd

DORMOBILE WORKS

FOLKESTONE

Tel. 51844

or from

Your Local Dealers